
THE LEAP TO ZERO CARBON AND ZERO EMISSIONS: Understanding How to Go Beyond Existing Sustainable Design Protocols

Terri Meyer Boake, BES, B.Arch, M.Arch, LEED AP¹

INTRODUCTION

The greening of North American building seems to be taking hold. The intended market transformation of the LEED™ Certification system appears to be working. Statistics show that the numbers of certified green buildings in both the United States and Canada are increasing at an exponential rate. The proposed changes to the USGBC version of LEED™—2009/V.3—are intended to support changes in the system that recognize differences in credit values as well as regionalized differences in the required approach to green building. The introduction of LEED™ for Homes and Neighborhoods has extended the potential influence of the program beyond the original commercial building marketing target. ASHRAE's proposed Standard 189.1 is also taking aim at increasing the standards for high-performance Buildings of a non low-rise residential variety.

However, with continuing environmental degradation, and more recent escalating concerns about global warming and CO₂ levels in the environment, it is becoming clear that even the highest standards of construction that are being implemented in North America today are simply not enough. While the design and construction industries in the United States and Canada scramble to adopt and evolve green building guidelines such as LEED™ to increase their rigor and range of applicability, the United Kingdom is advancing in the implementation of regulations that are specifically intended to control carbon emissions, and not just for commercial buildings.

Great Britain has already adopted policies that require all new housing stock to be carbon neutral by the year 2016. They are working towards the implementation of carbon taxes to motivate companies to look closely at the way that they consume energy and goods, and reward citizens that show initiative in responding to this crisis. The act of carbon counting is beginning to permeate a multitude of sectors in the UK.

The issue of carbon is not a simple one. There is carbon involved in the extraction of the resources that we use to create products; in the transportation of these products to the site; in the physical construction of the buildings; in the operation of buildings; and in the lives of people as they carry on business. In order to be able to reach a state of "carbon neutrality," lifestyle changes will be necessary. The status quo cannot be simply modified to reduce its carbon cost. Consumption patterns must change. Buildings and their programs may require downsizing or creative reinvention. Understanding the definitions of the terms that are associated with this elevated movement is important.

This article will examine the means by which to understand the potential of ratcheting up the performance requirements of existing North American green protocols to achieve carbon neutral standards, as well as how to interpret and extend existing assessment criteria to highlight and include carbon neutral interests.

EXISTING PROTOCOLS

A range of existing green building rating systems, protocols, guidelines, and standards has been developed over the last 10 years. *Except as adopted by local governments that are keenly engaged in environmental issues, none of these forms is a legal requirement as part of a building permit process.* The current legal mandate of North American Building Codes is to provide a set

of *minimum requirements* for Fire and Life Safety in buildings. At present they also largely include minimum requirements for insulation and window performance, and some also speak to air infiltration and air leakage. This varies by region and jurisdiction. A building that is constructed to meet the Building Code is generally not considered to have engaged in the creation of a green building. The exception to

¹Associate Professor, Associate Director, School of Architecture, University of Waterloo, tboake@uwaterloo.ca.

this would be the State of California, which has just announced the first “green” building code. Title 24¹ sets targets for single family homes, health care facilities, and commercial buildings to become mandatory in 2010.² The new California Green Building Standards Code calls for a 15% reduction in building energy use over the current standards, a 50% landscape water use reduction, and significant improvement in efficiencies for commercial and residential plumbing fixtures. The code also encourages the use of recycled materials and identifies various site improvements including parking for hybrid vehicles and more stringent management of storm water.

An assessment of existing protocols in sustainable building design would indicate that there are clear “levels” of performance when verifying the actual “greenness” of a building or development. The ability to numerically validate criteria is essential to the establishment of a classification of “high performance.” The term “high performance” has been adopted in the field of green building in lieu of the term “sustainable,” which, although holistic and forward thinking, remains unscientific.

The proposed ASHRAE Standard 189.1 “Standard for the Design of High-Performance, Green Buildings Except Low-Rise Residential Buildings” is intended to work not to compete with, but as a complement to LEED™, yet claims similar ground or topic areas. Its criteria mirror existing rating systems such as LEED™³ and Green Globes⁴. Its intention is to establish increased mandatory criteria in all topic areas as one problem its proponents see with existing rating systems is that they contain few mandatory provisions, and consequently a designer can achieve “points” and claim that they have a “green building,” but still make no improvements in some areas. Hence, not only is the adoption of the rating system optional, but so are many critical credits. Standard 189.1 intends to provide simple compliance options in reaction to a critique of existing rating systems that require extensive calculations to satisfy compliance.⁵ Standard 189.1 targets larger commercial buildings of four stories or greater and purposefully excludes single-family housing, multi-family structures of three stories or fewer above grade, manufactured houses (mobile homes), and manufactured houses (modular). These are deemed to be outside of the mandate of the High Performance Building type.

Green Globes is operated differently in Canada and the United States. The Green Building Initiative is in the process of transforming Green Globes into an ANSI Standard: GBI Proposed American National Standard 01-2008P: *Green Building Assessment Protocol for Commercial Buildings*. Although this Standard will include some carbon protocol, it again excludes the residential building type. This new protocol places a much greater emphasis on carbon. Of its 1,000 points, 250 are specifically targeted at carbon. One hundred and fifty points are awarded for a 50% reduction of carbon dioxide equivalent emissions. An additional point is awarded for every further 1% increase in reductions.⁶

LAYERS OF GREEN: ADDING CARBON TO THE EQUATION

The issue of global warming, although arising from the arena of sustainable concern about the state of the built environment, is more specifically concerned with greenhouse gas emissions. It is the level of CO₂ that is the direct byproduct of the building industry that requires modification to existing Green Building Protocols to add its consideration. The United Kingdom’s White Paper on Carbon Emissions, “Climate Change: The UK Program 2006,” has set out very aggressive targets to meet and exceed their Kyoto promises.⁷ Interestingly in the UK model, it is the residential building sector that is receiving the maximum attention, not commercial buildings. This is in absolute contrast to the status quo in North America, which is only now beginning to develop green building assessment protocols for the residential sector. Additionally, the UK government has sanctioned the construction of a number of “Eco Towns” across Great Britain. Part of the low carbon strategy that is being incorporated into the design of these developments requires increased dependency on renewable energy, much of which makes better economic sense as when attempting to implement district heating and cooling. This integrated community planning ensures a higher level of success in reducing CO₂ emissions from the residential sector. The proposed District heating will rely on geexchange, CHP (Combined Heat and Power) plants, waste heat from industry, and purpose-built heating plants.

FIGURE 1. Beddington Zero Energy Development (2002). This project takes a holistic approach to energy reductions. It uses a combined heat and power plant to provide energy to the complex. Energy requirements are reduced through passive solar heating strategies. The project uses super insulation to assist with heat retention. Air conditioning is not provided. Wind cowls assist with natural ventilation for cooling. Designed by ZEDfactory.



In addition to targeting renewable energy on a community scale, the UK Low Carbon Residential model is also looking for the incorporation of aggressive passive heating as well as the smaller scale use of solar and wind energy in individual residential projects. Technical progress has been made in the efficiency of micro turbines to supply wind energy to small scale projects. So although lowering CO₂ and other greenhouse gas emissions is the primary focus of the UK initiative, the methods do also have a positive sustainable impact on regional issues such as transportation, of both people and products, by reducing distances and reinforcing the sense of community. Consciousness about global warming is not the only driving force behind the UK impetus. There have been significant political issues surrounding a state of “Fuel Poverty” in the UK for many years.⁸ Much of the housing stock is very old and poorly insulated. The cost of fossil fuel in the UK and Europe has long been many times higher than the rates charged in North America. Fuel poverty is defined as the point at which a home owner (typically at a lower income level) must choose between heating their home and eating. A household is said to be in fuel poverty if it needs to spend more than 10% of its income on fuel to maintain a satisfactory heating regime (usually 21 degrees Celsius for the main living area, and 18 degrees Celsius for other occupied rooms). In con-

trast to North America, where fossil fuel prices have been forcibly kept low, high fuel prices in the UK have made consumers and residential neighborhoods more accepting of wind and solar opportunities that can provide a lower cost alternative.

The 2030 Challenge⁹ is a North American based move to reduce the greenhouse gas emissions for all new buildings to zero by the year 2030. The idea was put forth by architect Edward Mazria, one of the early passive and solar pioneers. The fossil fuel reduction targets are aggressive: 60% in 2010; 70% in 2015; 80% in 2020; and 90% in 2025. Carbon-neutral in 2030 means using no GHG emitting fossil fuels to operate buildings. At this point in time, the emphasis for the 2030 Challenge carbon reduction is focused only on operating energy. It presently is not considering the carbon implications of construction, the materials used in the building, the use of the building, or associated transportation costs. It is felt that the impact of operational energy is of greater significance as its negative costs to the environment will persist for the life of the building. Although many organizations have adopted the 2030 Challenge, there has yet to be developed a clear method of implementation to achieve its fossil fuel reduction targets.

It can be seen that the UK and North American focuses could benefit by being conjoined. The UK

FIGURE 2. Jubilee Wharf, Penryn, UK (2006). This zero energy development uses 4 micro turbines to provide power. Evacuated tubes provide solar hot water. The roof has been designed for PV, but no PV is presently installed. Directional wind cowls assist with natural ventilation to the point that no A/C is provided. A 75kW wood pellet boiler provides under floor radiant heating. The building is super insulated with 300mm of insulation netting a U value of $0.1\text{W}/\text{m}^2/\text{k}$. Designed by ZEDFactory.



has clear sights set on reducing carbon numbers through energy efficiency and the use of renewables, paying less heed to materials, indoor environmental quality, whereas the North American rating systems are non-specific about carbon, and focus more on issues of site selection, water, indoor air quality, sourcing of materials, as well as energy.

When designing the building for the type of high level of *holistic environmental* performance that could lead to a carbon neutral state, there might be considered to be an additive system that consists of “layers of concern” that shape and specify aspects of the design. An examination of the summation of the UK and North American initiatives could result in a complementary set of concerns. This does not infer abandonment of the growing success in the marketplace of initiatives such as LEED™. It does infer that it will be necessary to target LEED™ Platinum and higher to be able to eventually reduce carbon emissions. But even if designing to meet LEED™ Platinum, it does infer that the criteria that have been developed will require specific interpretation, extension, and calculations to make them effective means to approach reducing our carbon emissions.

Extending the sustainable design criteria to incorporate a new focus on low carbon practically infers that designers apply increasing levels of rigor in the adoption and incorporation of codes and protocols.

These could be incrementally outlined as:

1. **Basic Code Compliance**—meeting local building codes, national building codes, ASHRAE, and other legally required standards.
2. **Applying LEED™, Green Globes, GBI, ASHRAE 189.1 Standards in Design**—targeting the highest level of compliance for the chosen protocol, recognizing that compliance with any of these does not necessarily infer that the highest performance standard has been achieved for all parts of the building and site, and that carbon is not presently accountable under any of these measures.
3. **Focus on Zero Carbon or Carbon Neutral**—design of the building and its functions to minimize its direct and indirect contribution to carbon emissions. This would include analysis of both the components that comprise the various systems in the building as well as the overall energy performance of the building. Aggressively, this also includes the functional use of the building and the transportation requirements of the occupants.

It is also helpful to invoke Life Cycle Assessment in the design process. Life Cycle Assessment is a tool that feeds into the decision making process for various aspects of each of these strategies. There are car-

bon issues associated with material choices as well as the longevity of components. The current version of the Eco-Calculator that is published by The Athena Institute focuses on carbon values on the basis of prescriptive choices in building systems. This tool is available as a free download and is presently developed for low-rise versus high-rise buildings based on climate data for a limited number of cities.¹⁰ The Athena Eco Calculator is incorporated into the new GBI Standard that is under development.

It must also be stated that beyond basic code compliance, LEED™ and Zero Carbon principles are neither mutually inclusive nor mutually exclusive. They can be applied to the design of the building in any sequence or selectively. They are listed in this order as by the degree of magnitude of difficulty, and they tend to have a somewhat logical progression, or difficulty to achieve, in this particular order. There are aspects of the general LEED™, Green Globes, GBI, or ASHRAE 189.1 categories that can easily feed into the low carbon design and assessment.

TARGETING CARBON: REDUCE, RENEW, OFFSET

Holistic carbon neutral design is looking to reduce the carbon emissions associated with *all aspects of the project*. This would include the construction and materials, operating energy, as well as the carbon associated with the commercial, institutional, or residential use of the building by the occupants. This incorporates the nature of the work or activity that is carried on within a building. Locating the building to reduce transportation costs will factor into this equation, and thereby includes neighborhood and local or regional planning issues.

Zero Energy Design differs from Carbon Neutral Design in that it is more concerned with the reduction of the operating energy requirements for a building, focusing on the eventual use of zero fossil energy. The official ASHRAE definition for a Net Zero Energy building is “buildings which, on an annual basis, use no more energy than is provided by on-site renewable energy sources.” The Office of Energy Efficiency and Renewable Energy provides an array of definitions for Net Zero Energy Buildings, based on the base premise that, “A net ZEB produces as much energy as it uses over the course

of a year. Net ZEBs are very energy-efficient buildings, with the remaining low energy needs typically met through the use of on-site renewable energy.”¹¹ The Department of Energy provides supplementary definitions based upon the cases of Net Zero: Site Energy, Source Energy, Energy Costs, Energy Emissions, and Energy. Preferred renewable resources would be solar and wind, but renewable resources can include biomass, wood chips, and other waste materials, as long as they are from renewable sources. Obviously, the burning of any type of fuel, fossil or renewable, results in carbon emissions—creating one of the significant differences of the goals of Zero Net Energy and Carbon Neutral Design.

ZED buildings take advantage of the sun and wind, employing a high degree of passive solar heating, natural ventilation, and daylighting to reduce their energy requirements. They are typically super-insulated, and also use higher quality glazing systems. Their interior finishes include thermal mass to store the free heat they capture from the sun. They will generate their own electricity through wind turbines, photovoltaics, and micro generation facilities. Their goal is to be able to generate more electricity than they require for operation. These design intentions are shared with Carbon Neutral buildings.

To build carbon neutral also suggests a paradigm shift from the classic 3 Rs, *reduce, reuse, and recycle*, to:

1. **Reduce**—build less, protect natural ecosystems, build smarter, build efficiently.
2. **Renew**—use renewable energy, restore native ecosystems, replenish natural building materials, use recycled and recyclable materials.
3. **Offset**—compensate for the carbon you can't eliminate, focus on local offset projects. Carbon offsetting is gaining popularity, but it needs to be remembered that purchased offsets cannot be generated in adequate quantity to perpetuate and sustain our current practices.

Reduce

The notion of reduction is critical as a starting point for low carbon strategies. The idea of increased energy efficiency in building design has been integral to green design strategies since the Oil Embargo of the 1970s. The byproduct of energy efficiency has

been a reduction in the requirement for energy to heat and cool buildings. In northern climates, this has been the direct result of increasing insulation levels and airtightness in construction. The natural extension of this idea leads to the reduction in the requirements for fossil fuels to heat and cool buildings. Fossil fuel reduction leads to a reduction in carbon.

The idea of widespread reduction in the size and scope of projects in their entirety is new to the carbon argument. There have been criticisms levied at “green homes” that have been in excess of 4,000 square feet in size. Can a building be properly labeled as sustainable, if its use of materials and space exceeds any sense of modesty in proportion to the base program requirements? Some movement in limiting residential areas for sustainable buildings is underway in revisions to current assessment systems and in the new ASHRAE standard that is under development.¹² However, in the ASHRAE standard, the maximum size of residential units that form part of a High Performance Green Building is only part of the Optional system of compliances. No option is provided for the reduction of commercial or institutional spaces. In part, including such an option in a standard would be problematic. Where there are fairly clear minimum space requirements associated with a residential program, the program requirements for non-residential buildings are far less fixed, even if measured on a square-foot-per-person basis. A greater level of creativity is necessitated in approaching commercial and institutional design with a mind to the reduction of area and volume. Most in the design profession would consider such an infringement on their design freedoms.

Reduction in the scope and size of a commercial building could also be considered to be a red herring where architectural fees are levied as a percentage of the construction cost. There is a disincentive to build less as there could be seen to be a reduction in fees. Nonetheless, the base principle of “building less” guarantees a decreased use of material resources (and the associated carbon that accompanies their production and transportation to the site). Building less also facilitates reductions in operating energy as it would be assumed that the volume to heat and cool would be proportionately smaller. Building less might have a positive impact on the use of the site,

leaving more residual space for both landscaping as well as the harvesting of renewable energy. This will work to protect the natural ecosystems on the site as there should be impact reduction through a smaller building. Natural ecosystems can be calculated to generate oxygen—thereby naturally offsetting carbon production on the site.

Renew

The notion of “renew” builds on principles of sustainable design already in practice. The use of renewable energy is already addressed and promoted in LEED™, Green Globes, GBI, and in ASHRAE 189.1. Only the new ASHRAE standard promises to mandate a certain percentage of renewable energy in a project. As of the state of the document in May 2008, on-site renewable energy power systems with a peak electrical generating capacity of not less than 1.0% of the electrical service load were to be required. There has been some criticism that this amount is insufficient to have a true impact on the overall energy requirements for the building, so this might be revisited.¹³ LEED™ Credits 2 and 2.1 in Energy and Atmosphere reward one point each for the supply of at least 5% or 10% of the building’s total energy use (as expressed as a fraction of annual energy cost) through the use of on-site renewable energy systems. Green Globes also uses the references of 5% and 10% for the integration of renewable energy sources such as solar, wind, biomass, or photovoltaics with reference to the total load of the project. The revised GBI Standard allots 50/1000 points for the use of off-site and on-site renewable power. When looking to design to zero carbon, it is desired that ONLY renewable energy be used to provide a level of heating and cooling comfort that is unable to be produced by the passive functions of the building alone. This differs substantially from any of the current protocols in terms of “extent” of reliance on renewable energy as most assume that even the best projects will be maxed out at a significantly lower level.

The use of renewable materials is addressed in all protocols. ASHRAE Standard 189.1 includes the use of renewable materials, those with lower impact, and those with recycled content in its optional prescriptive requirements. It mandates construction waste management as well as the use of certified wood

products. LEED™ awards a significant number of total credits based upon the reuse of the building (3), construction waste management (2), use of materials with recycled content (2), resource reuse (2), local/regional materials (2), rapidly renewable materials (1), and certified wood (1). None of these is a mandatory credit. Green Globes allocates 100/1000 available points to encourage the use of low impact, renewable, and reused materials. Again, these are all optional.

The analysis of the impact of materials through Life Cycle Assessment is a Performance Option in Standard 189.1. Durability of materials is a Credit in the Canadian LEED™ system. Green Globes devotes 15/1000 points for durability, adaptability, and disassembly. These more complex credits are of interest to a carbon neutral project. The use of a Life Cycle Assessment analysis can facilitate an examination of the carbon costs of the building materials. Durability offers something similar in that the longevity of the building and its components can reduce the long-term carbon cost of a building. Replacement of materials and systems with a short life span increases the carbon cost of a building over its lifetime. The intention is that a carbon neutral building be durable as not to incur a carbon debt over time. Design for disassembly increases the complexity of the design of a project but does offer the potential of short circuiting the cradle-to-grave cycle of a building, thereby saving future carbon.

The relationship between any of the material credits and carbon neutral design is more difficult to define. Holistic sustainable motivation would offer that renewable materials are simply better because earth's resources are in finite supply. The carbon argument examines the value of different materials based upon their carbon costs, both in fabrication, transportation, and site assembly. Any carbon costs associated with the materials themselves must be offset by the ability of the site to absorb the same carbon. The restoration of native ecosystems on site is looked at as a means of providing for increased capacity of the site to sequester or process CO₂ into oxygen. The use of local materials is of obvious benefit as it has the potential of drastically reducing the carbon associated with transportation.

It is the complexity of the building materials issue that has led the current initiatives toward car-

bon neutral design to set this aspect of the building aside and concentrate on operating energy. The latter is far easier to define and therefore calculate.

Offset

Offsetting (i.e. purchasing credits from others who are able to prove that they are able to absorb your excess carbon by some means) should be considered the last line of recourse to bring a project to a carbon neutral state. Site conditions for many projects can place constraints on the viability of using your own renewables. Limited site area, incorrect exposure for solar and PV, overshadowing, etcetera, will restrict the output of site located systems. Offsetting and carbon trading are becoming an increasingly popular way to look at compensating for the carbon expense of a project. It should be remembered that the ability of the world to generate offset capability is limited. The notion of carbon offsetting is not addressed in any of the existing green design protocols.

Offsetting is also likely to be developed in relationship to the size and scope of a project. As few truly carbon neutral buildings have been constructed; to date, a pattern has not yet emerged. But it is not too difficult to predict that the need for offsetting will be higher where the proportion of building size to site exceeds the capability of the project to generate its own renewable power. Smaller buildings with less electrical load will be more capable of achieving carbon neutrality without offsetting.

CARBON AND ENERGY USE

Energy use is the current focus of most initiatives toward a state of carbon neutrality in building. Long-term operating energy is considered to contribute more significantly to the greenhouse gas issue than other aspects of construction. All of the existing green building protocols award significant credits to the energy consumption of a building. None, however, mandate net zero energy or carbon calculations.

ASHRAE Standard 189.1, in addition to its mandatory renewable energy element, also mandates metering, meter data collection, and data storage and retrieval. It offers prescriptive and performance options that include considerations of building envelope design, insulation levels, and electrical and mechanical equipment. LEED™

V2.1 requires that the building be designed to comply with ASHRAE/IESNA Standard 90.1-1999 (without amendments) or the local energy code, whichever is more stringent. Improvements on this level of energy efficiency can earn up to 10 credit points. The maximum suggested reduction over Standard 90.1-1999 is 60% for new buildings and 50% for existing buildings. LEED™ Guidelines outline a three-step approach to optimizing the energy efficiency of buildings: demand reduction, harvesting free energy, and increased efficiency.¹⁴ The LEED™ requirement for LEED 2009 has recently been announced to be upgraded to increase the Minimum Energy Performance prerequisite requirements; update to ASHRAE 90.1-2007 for energy requirements; and include other energy efficiency enhancements, including increased incentive for On-Site Renewable Energy.¹⁵ Green Globes devotes 380/1000 points toward energy efficiency. It benchmarks against the Model National Energy Code for Buildings in Canada, with the highest level of performance suggested to be less than 10 kWh/sf-yr, or less than 388 MJ/m²-yr, or 50% or more reduction of MNECB. Green Globes credit C.2 is of interest to carbon design as it explicitly awards 114/1000 potential points for a reduction in demand. These include: space optimization, response to microclimate and geography, building envelope, integration of daylight, and integration of sub-metering. The proposed GBI Standard is more proactively addressing the combined issue of energy and carbon. It allots 300/1000 points towards Energy, and requires that in order for a building to be certified at any level, that a minimum of 150 be achieved if following a Performance Path, and 100 be achieved if following a Prescriptive Path through the standard.

Where the energy efficiency of sustainable buildings is only a portion of the focus of any of the protocols or standards, it is *the* focus of designing for carbon neutrality within the terms of the 2030 Challenge. Where the existing protocols offer a smorgasbord of potential credits, or unordered “checklists,” the totality of the carbon neutral target necessitates an ordering of required steps as the only means to achieve this aggressive goal. Carbon neutral design works against the “checklist” principle and asks for a highly holistic beginning to the examination of

the design problem. The four basic steps that are required to begin to design a building to meet a zero carbon target are:

1. **Reduce loads/demand first** (passive solar design, daylighting, shading, orientation, use of natural ventilation, site design, and materiality, etc.)
2. **Meet loads efficiently and effectively** (energy efficient/effective lighting, high-efficiency/effective MEP equipment, controls, etc.)
3. **Use on-site generation/renewables to meet energy needs** (doing the above steps before will result in the need for much smaller renewable energy systems, making carbon neutrality achievable.)
4. **Use purchased Offsets** as a last resort when all other means have been looked at on site.

Unlike many of the green rating systems or standards, the above criteria can be applied to any building or project, including commercial, institutional, and any density or height of residential building.

Reduce loads/demand first

This *must* be the starting point for any carbon neutral design. If the building is not carefully designed to lessen its impact (material and energy requirements) from the outset, it will not be possible to provide adequate renewable energy to allow the building to operate. This includes rethinking the scope of the building (size and height). The smaller the building the smaller its carbon footprint and lower the amount of energy to operate. This might not simply infer a reduction in square footage, but a reinvention of the program. Questions will need to be asked that rank the relative importance of spaces and offer the possibility of doubling up on program needs to make better daily or seasonal use of program functions.

Carbon neutral design requires a back-to-basics thinking in passive design terms with deference to the use of natural systems to heat and cool the building. Relating the site to issues of *orientation* and *massing* will begin to impact the way that programmatic requirements may be accommodated in the building. Certain uses may be able to take better advantage of passive heating and cooling if they are located according to site and exterior landscap-

ing characteristics. Daylighting will greatly assist in reducing energy costs as well as provide a higher sense of well-being to the occupants. The consideration of local site conditions may help to determine the placement of daylit versus non-daylit or service spaces. The *cross sectional characteristics* and *building height* may also need to be modified to feed into lower energy, natural solutions. Synergies may be possible when looking at spaces that have larger mechanical or cooling requirements, where waste heat may be able to be used to provide heat transfer to atria or circulations spaces that can make do with a lower level of constant comfort. Issues such as these are not to be found on any “checklist,” but greatly impact the overall environmental performance and energy requirements of the building.

The proposed GBI Standard offers a significant section on energy reduction through the inclusion of thermal mass as well as breaking the thermal resistance requirements out into eight separate climate zones in order to provide a prescriptive set of standards for insulation values and the energy efficiency of windows. These are stated in terms of Passive Demand Response and Power Demand Reduction¹⁶ and offer a clearer feed into the reduction terms outlined in zero carbon protocols.

Site design is also critical as it will affect the ability to incorporate renewable energy into the project, as well as impact the potential for natural systems to sequester carbon. Low carbon thinking must inform the site selection as well as the placement of the building on the site. LEED™ and Green Globes both devote many credits/points toward site issues that might appear to be similar in scope and intention. Both address issues of coverage and density, but neither goes so far as to require that the natural systems and orientation be used in carbon related ways.

Meet loads efficiently and effectively

Once the building and its program have been designed to reduce their need for heating, cooling, and lighting, it is necessary to ensure that whatever mechanical, electrical, and plumbing fixtures or systems are chosen are of the highest efficiency to require the least amount of power/electricity. Again in order to be able to supply all of the required energy via renewables, the amount required needs to be

trimmed down. Sensor systems can assist in eliminating loads for many types of equipment when their use is no longer needed. This would include switching systems for lighting that recognizes both the amount of helpful daylight as well as the presence of occupants.

Recently many high profile green buildings have come under fire as they have not been able to perform as well as they had been predicted. In many instances it was not the actual building that failed, but the use of the building that contributed to its poor energy ratings. Often the plug loads (computers, electric white boards, and other electronic equipment) have been blamed for the bad performance levels. This has been a highly political issue in the construction of many new high performance schools in the UK. The buildings themselves are operating efficiently, but the switch from classic blackboards to electronic whiteboards has added significantly to mounting power issues. Old-fashioned schools had few power requirements beyond heating and electric lighting. When designing carbon neutral, and relying principally on site generated renewables, a full disclosure by the client of anticipated plug loads will be essential to the success of the project. Occupant load and duration of work or occupation hours must also be accurate. If a building is essentially disconnected from the grid, the flexibility will not be there to accommodate erratic increases in either occupancy or plug loads.

Progress has been made in the design of sensors that are capable of shutting off entire rooms or areas when they become unoccupied. This answers the issue of “ghost” or “phantom” loads. Phantom loads happen when electric devices such as computers are turned off, but in fact draw a small amount of power to keep them in a standby mode. These loads become significant when attempting to balance the energy in a building and so the use of “all off” systems can assist in eliminating these loads from the equation. Sensors and monitoring systems do not replace the education of the occupants. Occupant education and involvement will be critical in ensuring that many of the passive systems function optimally, but misuse or unintentional overuse of electrical equipment could easily throw off the entire energy balance.

Use on-site generation/renewables to meet energy needs

Generally speaking, most of the energy requirements anticipated for carbon neutral buildings should assume electricity for their operation if the intention is to meet most of the energy needs through on-site, non CO₂ producing renewables. Once the building and equipment have been designed for maximum effectiveness and efficiency, it may be possible to generate 100% of the required electrical energy on site—although site characteristics, location, orientation, and sheer size may make this more difficult. Dense urban sites are likely to pose the most difficulty in this regard.

The common methods assumed for power generation are: BIPV or non-integrated photovoltaics, wind (large or micro turbines), combined heat and power (CHP), and geothermal. The design of Building Integrated Photovoltaics needs to be incorporated into early design discussions involving the massing and orientation of the building. Surfaces need to be maximized for the architectural incorporation of PV units. Geoexchange and CHP systems will work on both urban and less dense sites. Wind generation is likely to be the most contentious to incorporate as it is the least architecturally integrated of the systems and, due to its appearance and acoustic issues, most likely to generate neighbor issues. As the electrical output of renewables tends to be variable, it is advised to incorporate multiple

systems into the project to allow for lulls in generation. This would be particularly advised when using solar and wind systems. If connected to the grid, net metering is likely preferable to battery storage for overproduction as there are environmental issues with the chemicals and materials that comprise the batteries themselves as well as their limited longevity and subsequent disposal.

Use purchased Offsets

Again, if it is simply not possible to balance the energy required to operate the building with renewable energy generated on site, purchased offsets can be used as a *last resort* when all other means have been looked at on site.

CARBON, CONSTRUCTION PRACTICES, AND THE SITE

To this point we have looked at the general concerns with respect to the carbon associated with the materiality of the building as well as its operating energy. Construction practices will also need to be refined to consider carbon. As carbon can be sequestered or stored in the ground as a means of removing it from the atmosphere, it needs to be appreciated that it is also released during excavation and any such processes where land is disturbed. The potential and preservation of the landscape and existing ecosystems on the site needs to be included in design and construction planning.

FIGURE 3. The Aldo Leopold Legacy Center, Bariboo, Wisconsin. This LEED™ Platinum building is also the first carbon neutral building in the United States. The conception of the design began with a budget and resultant area that would be dedicated to the installation of roof mounted photovoltaics. The building's energy use and size was designed with this limitation. Designed by Kubala Washatko Architects.



Site and Location Matter

Whether you are building on a Brownfield or conserved ecosystem, and whether the site is urban, suburban, or rural will greatly affect the ability to restore or regenerate the ecosystems on the site. The ecosystems of the site will determine the *potential* for carbon sequestration on site. Where LEED™ gives preference to Brownfield sites, unless these undergo intensive replanting and natural restoration, they may prove to be more difficult when it comes to the ability to sequester carbon on site through its natural systems. This is not to say that Greenfield development is better, only that more consideration to the regeneration of Brownfields from the perspective of new planting and new ecosystems will be required to assist in the containment of carbon.

Disturbance is Impact

Carbon is released into the atmosphere when earth is disturbed. Where LEED™ credits require that contractors limit their use of the site for staging to protect the natural ecosystems, the protection of the existing soil and vegetation in this instance is intended to limit the release of carbon through disturbance. Designing the foundations to minimize impact might mean the use of micro-piles or drilled foundations in lieu of an open excavation so that less soil is overturned. Minimizing the moving of soil around the site for earth works will also limit unnecessary carbon release. Disturbance changes existing ecosystems, natural habitats, and changes water flow and absorption, which may have other negative effects on the site condition as well. Disturbance can kill trees, lowering the site potential for carbon reduction.

Natural Ecosystems Sequester Carbon

Carbon is naturally stored below ground and is released when soil is disturbed. There are significant scientific efforts underway to look at using the ability for the earth to sequester carbon in massive quantities through injection. Proper treatment of the landscape can keep this carbon in place (sequestration). This is in part related to reducing disturbance of the earth itself, and also related to the type of plantings that are chosen for the landscaping on the project. Proper treatment of the landscape and selection of plant materials can be designed to store/accumulate/sequester

more carbon over time. Biodiversity can assist in creating a healthy landscape that is capable of processing CO₂. Avoidance of annuals and the selection of perennials and low care ground covers can virtually eliminate the need for tilling and maintenance that disturbs the soil. The addition of larger tree species can increase the capacity of the project to sequester more carbon as sequestration increases with the growth of trees. It is necessary to verify the landscape design type with your eco-region. The recognition of the eco-region is to be included in LEED™ 2009, but more related to energy and climate related issues, and not to the treatment of the landscape. The use of indigenous plant material requires less maintenance/water. Additionally, healthy plants absorb more CO₂. It is therefore possible to use the natural ecosystems on your site to assist in lowering the carbon footprint of your project.

FIGURE 4. IslandWood, Bainbridge Island, Washington. The buildings for this LEED™ Gold Eco Retreat were all sited to maximize their solar potential. Construction was kept to 3% of the site to minimize disturbance and preserve the natural ecosystems on site. The roof of this education building is covered in PV to power the electrical needs of the classrooms. The building design uses passive principles and materials to retain heat and promote cooling. The roof is constructed in a butterfly shape to collect rainwater, which is directed for storage in a large cistern at the front left of the building. Although not specifically designed with carbon neutral as the focus, the project employs all of the base concepts that reduce demand and impact making zero carbon the next logical step. Designed by Mithun Architects.



Sequestering Carbon with the Building

Buildings and material choices can help to sequester carbon. The materials that you choose can help to reduce your carbon footprint, and the construction methods associated with materials and systems can also impact carbon production. In a holistic consideration of the carbon issues surrounding the built environment, the energy used to construct the building should also be considered. What types of tools and equipment are used in construction? Electrically powered tools can make use of available green power if the renewable sources are not yet in place on the site. The use of heavy equipment adds carbon use to the project as these typically run on diesel fuel.

Wood from certified renewable sources, wood harvested from your property, or wood salvaged from demolition and saved from the landfill can often be considered net carbon sinks. Certified wood is addressed in existing green building protocols as is construction waste management. Harvesting wood in a sustainable fashion from the site property or by arrangement from a local forest is new to the carbon problem. This has been successfully accomplished on the Aldo Leopold Center, the only carbon neutral project in the United States as of 2008.¹⁷

Incorporating green roofs and living walls into the building design can assist in carbon sequestra-

tion and become part of the building itself. These systems have long been incorporated into the LEED™ Credit system, but carbon neutral design is looking for their benefit in a more particular way.

CALCULATING CARBON

To this point in the discussion, the issue of designing a low-to-zero carbon building has been treated holistically and from the perspective of basic principles. Where these are the essential starting points for the carbon neutral design process, “zero carbon” mandates a numerical assessment and validation of the realized design. Zero Carbon requires designers to numerically validate the effectiveness of their approaches. There are various means by which this can be done, as well as relative scales of the problem that might be examined that range from personal carbon footprinting to site impact to the actual carbon costs of the building’s operational systems.

Carbon Footprint calculators are available online to look at your personal carbon emissions. Carbon footprinting is to be differentiated from Eco-footprint calculators that measure one’s consumption in terms of the number of planets required to satisfy the consumption of transportation, housing, and goods. While not directly related to the specific development of an architectural project, these types of calculators can assist in getting a feel for the numeric

FIGURE 5. The Aldo Leopold Center started with the sustainable harvest of the Leopold forest. The wood was assessed and sized to maximize the number of structural columns and beams. The remaining wood whose diameter was insufficient was cut into smaller members as well as exterior and interior cladding. The structural system of the building was designed based on the materials list. This runs contrary to normal practices where the building is first designed and the materials ordered (even if limited to a close radius to reduce emissions impacts).



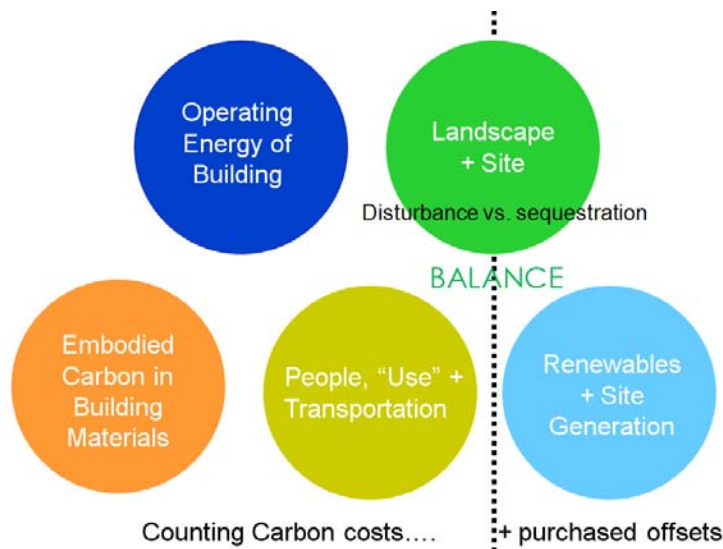


FIGURE 6. Balancing carbon—calculators are needed to provide accurate feedback as to the ability of the renewables, landscape, and offsets to balance the carbon loads of operating energy, embodied carbon, and transportation.

relationship between lifestyle, consumption patterns and carbon. They can also be useful for projects that wish to extend their carbon analysis to include the transportation components of the occupants, as the transportation value can be isolated within most of these online calculators.

Carbon Estimators are available online to begin to assess the impact of buildings. The impact analysis carried out through www.buildcarbonneutral.org provides a more general figure as relates to project inputs specifying the building size (total square feet, stories above and below ground), the primary structural system above ground (wood, steel, concrete, or mixed), and site conditions (eco region, existing landscape, proposed landscape, amount of landscape disturbed, and amount of landscape installed). This is a free calculator, simple to use and therefore of great benefit at the outset of a project.

Carbon Calculators are available for purchase that will work with BIM systems and provide a fairly accurate feedback mechanism. The Green Building Studio suite, recently purchased by Autodesk, integrates detailed energy calculations into CAD inputs for a project.¹⁸ It is able to provide very detailed feedback and allows for benchmarking against base cases while improvements are worked through the digital model. The Athena Institute offers a free Eco-Calculator, which includes carbon numbers for limited building sizes and regional locations, a

purchasable Impact Estimator that includes global warming potential for a project, in addition to now offering Carbon Footprint Consulting services.¹⁹ Carbon can be calculated by other methods that are more detailed and more project specific. The increased awareness of the carbon related issues surrounding the built environment are likely to result in an increase in the range of products available to assist practitioners with these potentially complex calculations. Whether looking at the operating energy use alone, or including the materials, construction, site disturbance, and functional use of the building, all calculations need to examine the holistic aspects of the project in order to achieve a balance between carbon costs and the ability of the project to sequester carbon.

CONCLUSIONS

As has been illustrated the progression of green building design to include issues of carbon is highly complicated, but does build on some important groundwork that has already been achieved through the development of existing sustainable building protocols. By grounding a project in the basic concepts of demand reduction through the application of passive design principles, it will facilitate a higher potential for success in answering carbon neutrality through the on-site generation of adequate renewables to power the project.

As can be seen through a comparison of the mandatory requirements and options that are set out by LEED™, Green Globes, and the upcoming GBI Standard and ASHRAE Standard 189.1, with the more rigorous requirements of holistic carbon neutrality, there is an order of magnitude in the difficulty of achieving this aggressive goal. However, by looking abroad to the proactive requirements that are being mandated by the government of the United Kingdom in their targets for zero carbon housing by the year 2016, it should be possible to re-examine and extend our current North American green design protocols to adopt similar practices and methods.

The Society of Building Science Educators (SBSE)²⁰ is working in conjunction with funding from the American Institute of Architects (AIA)²¹ and a private donor to develop an independent set of carbon design protocols that will be able to be applied to a range of scales of building types, including low density residential buildings. This information will be available online by mid 2009 through the AIA and SBSE web sites. The Carbon Neutral Design Project will build on the basic methods of approach as outlined in this document and provide more rigorous methodologies as will be ascertained from the examination of a range of existing and proposed low carbon case studies as provided by a team of practitioners, design studio professors, and students.

This is a global problem, and as such, will require a more inclusive global solution.

REFERENCES

1. <http://www.energy.ca.gov/title24/>.
2. http://www.aia.org/aiarchitect/thisweek08/0725/0725n_code.cfm, and http://www.bsc.ca.gov/prpsd_stds/default.htm.
3. LEED Credit Summary. <http://www.usgbc.org>.
4. Green Globes Summary. http://www.greenglobes.com/design/Green_Globes_Design_Summary.pdf.
5. AIA Convention Presentation. May 2008. TH12: Standard 189: High-Performance Green Buildings. John Hogan AIA.
6. GBI Proposed American National Standard 01-2008P: *Green Building Assessment Protocol for Commercial Buildings*, Public Review Draft October 24, 2008.
7. Climate Change: The UK Programme 2006. <http://www.defra.gov.uk/environment/climatechange/uk/ukccp/pdf/ukccp06-all.pdf>.
8. Information on Fuel Poverty: <http://www.berr.gov.uk/whatwedo/energy/fuel-poverty/>.
9. <http://www.architecture2030.org>.
10. The Athena Institute Eco Calculator. <http://www.athenasmi.org/tools/ecoCalculator/>.
11. http://www.eere.energy.gov/buildings/highperformance/zero_energy_buildings.html.
12. It should be noted that one of the Optional Provisions in the ASHRAE 189.1 Standard in the area of Energy Efficiency is to limit the size of residential units to Maximum dwelling unit sizes: 90 m² (900 ft²) for 1-bedroom units, 125 m² (1,250 ft²) for 2 BR, 170 m² (1,700 ft²) for 3 BR, 210 m² (2,100 ft²) for 4+ BR
13. Audience feedback during the presentation of Standard 189.1 at the AIA Convention in Boston in May 2008 felt that the amount required should be at least 5% to have appreciable impact.
14. LEED Guidelines: LEED-NCv2.1EA page 138.
15. Information as per October 14, 2008, e-mail update on the status of LEED 2009 from S. Rick Fedrizzi CEO, President and Founding Chair, USGBC.
16. GBI Proposed American National Standard 01-2008P: *Green Building Assessment Protocol for Commercial Buildings*, Public Review Draft October 24, 2008. P. 29.
17. Aldo Leopold Legacy Center website: <http://www.aldo-leopold.org/legacycenter/>.
18. AutodeskGreenBuildingStudiowebsite:<http://usa.autodesk.com/adsk/servlet/index?id=11179508&siteID=123112>.
19. The Athena Institute: http://www.athenasmi.org/about/services/carbon_footprinting.html.
20. SBSE Website: <http://www.sbse.org>.
21. AIA Website: <http://www.aia.org/>.